

取付け手順

① サイトの仮取付

一度サイトをマウントに 取り付け、ネジがマウン ト裏側から飛び出してい ないか確認する。※ネジ 穴とネジは 1.5mm 以上嚙 合わせること。





パーツリスト

- マルチマウントベース
- ・マルチマウントスペーサー
- ・M3×7,8 六角穴付き皿ボルト(各2個)
- ・M3×4,5,6 六角穴付きボルト(各2個)

説明サイト



https://rs-giken.com/?page_id=1000


② マウントの取付

- 1.内部メカの取り外し (コツがいるので、動画等 を参考にすることを推奨)
- 2.マウントベースをスライ ドに乗せる
- 3.内部メカを元に戻してマウントの固定ネジを締める。(ネジは Glock 本体に付いていたものを使用)
- 4.仮取り付けに使用したネジでマウントスペーサと サイトを取り付ける



Installation Procedure

1 Temporary Installation Attach the sight to the mount temporarily and ensure that the screws are not protruding from the back of the mount. *Make sure the screw holes and screws engage by at least 1.5mm.

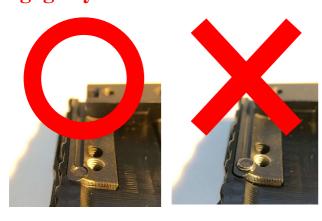

Parts list:

- · Multi-mount base
- · Multi-mount spacer
- M3×7,8 Hexagon Socket Head Cap Screw (2 each)
- M3×4,5,6 Hexagon Socket Head Screw (2 each)

Description Site



https://rs-giken.com/?page_id=1000

2 Mount Installation

- 1. Remove the internal mechanism. (It is recommended to refer to videos or other resources for guidance as some skill may be required.)
- 2. Place the mount base on the slide.
- 3. Restore the internal mechanism and tighten the mounting screws. (Use the screws that were originally on the Glock body.)
- 4. Attach the mount spacer and sight using the screws used for temporary installation.